

Printer Settings

EPSON L8050



Close




Smart Identity Pro

and



Adobe Reader

before applying printer settings

Open ***Devices and Printers*** or ***Printer and Scanners*** based on your Windows version

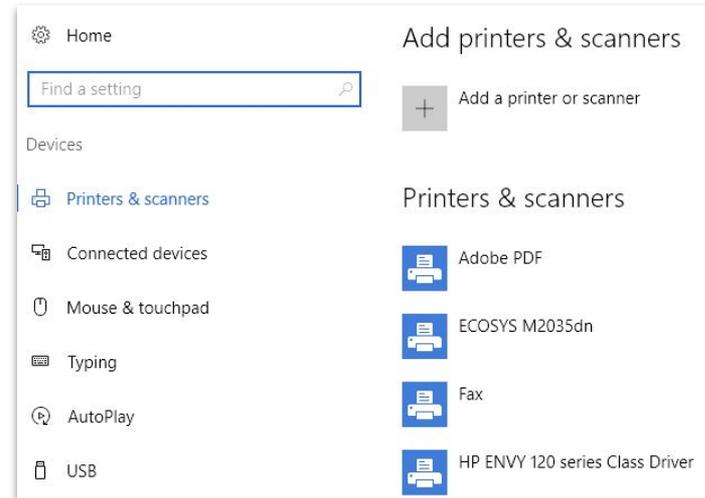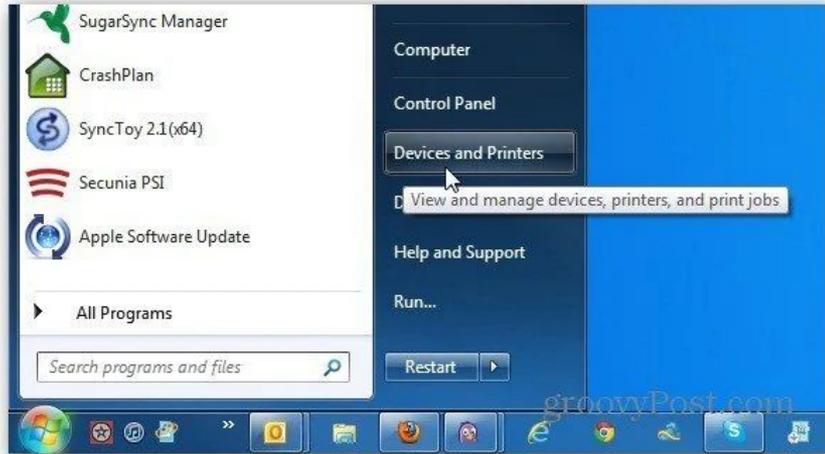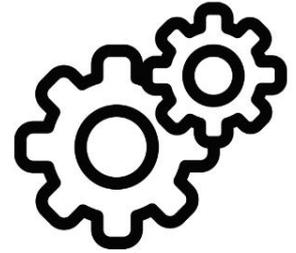

Right click on printer icon to select *Printing Preferences*

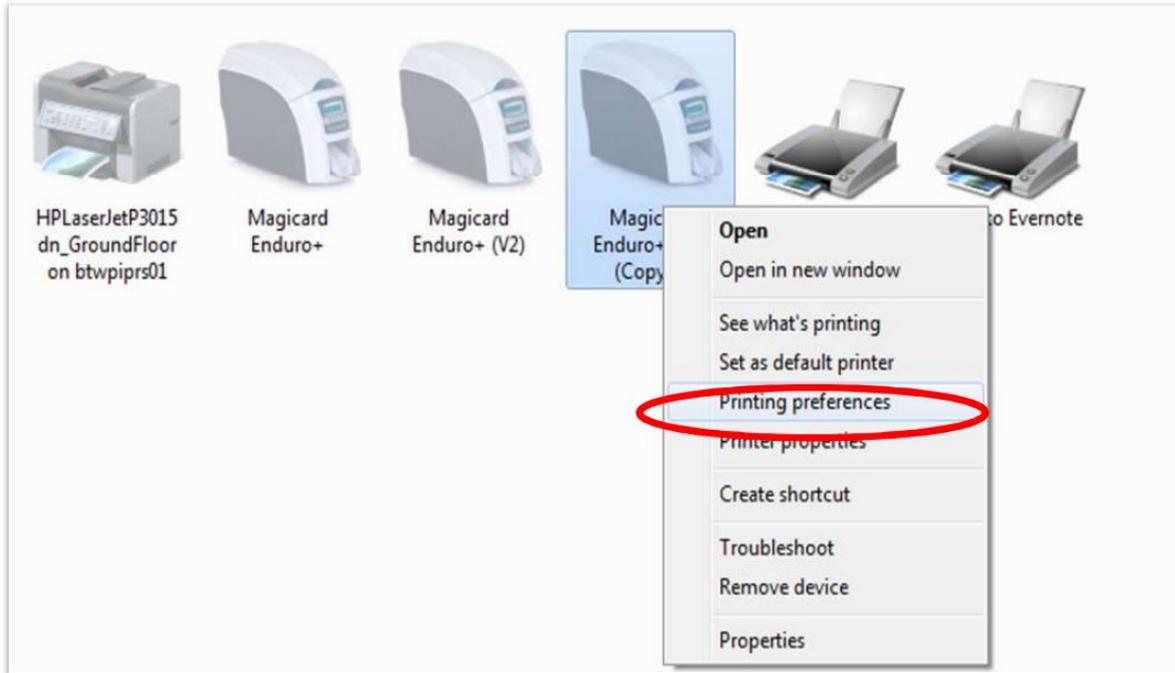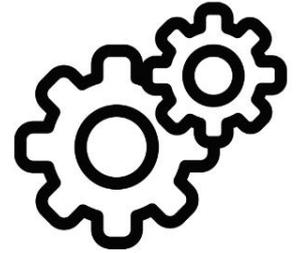

Printer Preferences (*match as shown*)





The screenshot shows the 'EPSON L8050 Series Printing Preferences' dialog box. The 'Main' tab is selected. The 'Printing Presets' list on the left includes 'Printable Disc Label Printing' (selected). The right-hand settings are as follows:


- Paper Source: Disc/ID Card Tray (circled in red)
- Document Size: A4 210 x 297 mm
- Orientation: Portrait (selected)
- Paper Type: PVC ID Card (Borderless) (circled in red)
- Quality: Standard
- Color: Color (selected)
- 2-Sided Printing: Off
- Multi-Page: Off
- Copies: 1
- Collate: checked
- Reverse Order: checked
- Quiet Mode: Off
- Print Preview: checked
- Job Arranger Lite: unchecked

Buttons at the bottom include 'OK', 'Cancel', 'Apply', and 'Help'. A 'Settings...' button is also present under the 2-Sided Printing section.

Open Smart Identity Pro -> Settings

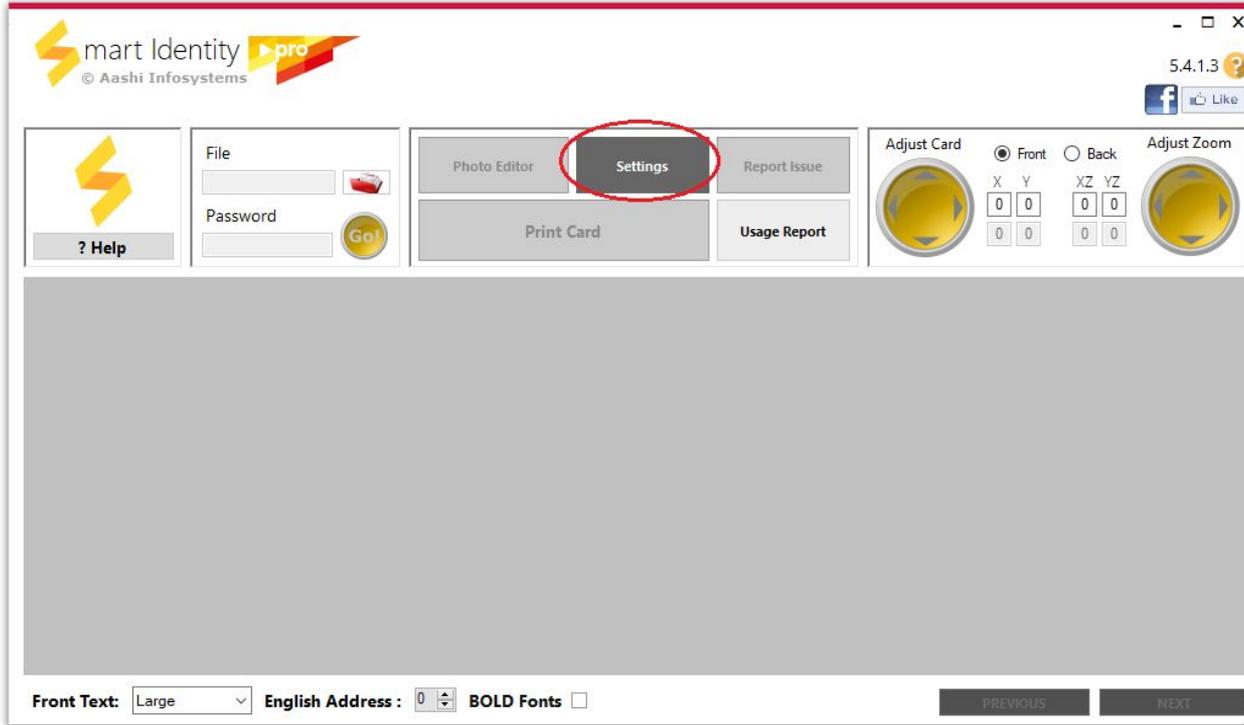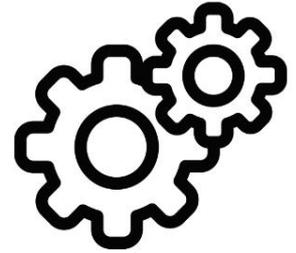

Choose *Printer Type* as *Card Tray*

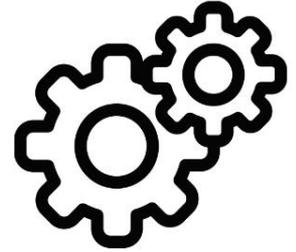

Settings

Card Elements

- Front Page Header
- Front Page Footer Margin
- Front Page Footer Text
- Rear Page Header
- Rear Page Footer Margin
- Rear Page Footer
- Rear Page Barcode
- Rear Page UID
- Auto Align Contents
- Photo Frame
- Download Date
- Generation Date
- Colored Footer
- Mobile Number
- VID

Offsets

Front Header Offset	0
Rear Header Offset	0
Front Footer Offset	0
Rear Footer Offset	0
Photo Offset	0

Child Aadhaar Style

Half Panel Full Panel

Data Protection

License

User Info

Language

Font Size

Printer Type

Card Printer

Card Tray - Epson

A4 Sheet Printer

Printing Options

Rotate Front Rotate Back

A4 Cutting Guidelines

PDF Printing

Stamp

Accessibility Options


Filenames contain Password

Show Password

Remember Last Password

Auto detect footer Language

Open *Card Tray Settings*

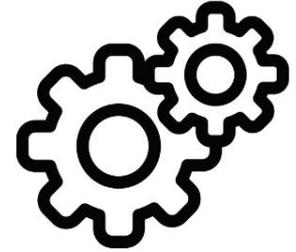

Settings

Card Elements

- Front Page Header
- Front Page Footer Margin
- Front Page Footer Text
- Rear Page Header
- Rear Page Footer Margin
- Rear Page Footer
- Rear Page Barcode
- Rear Page UID
- Auto Align Contents
- Photo Frame
- Download Date
- Generation Date
- Colored Footer
- Mobile Number
- VID

Offsets

Front Header Offset	0
Rear Header Offset	0
Front Footer Offset	0
Rear Footer Offset	0
Photo Offset	0

Child Aadhaar Style

Half Panel Full Panel

Data Protection

License

User Info

Language

Font Size

Printer Type

- Card Printer
- Card Tray - Epson **Settings**
- A4 Sheet Printer

Printing Options


- Rotate Front Rotate Back
- A4 Cutting Guidelines
- PDF Printing
- Stamp

Accessibility Options

- Filenames contain Password
- Show Password
- Remember Last Password
- Auto detect footer Language

Save

Choose *Printer Model*

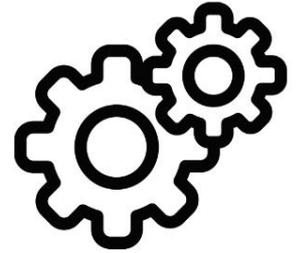

Card Tray Settings

Printer Model 


Left Margin Offset

Top Margin Offset 

Card Gap Offset 

Tray Bleed 



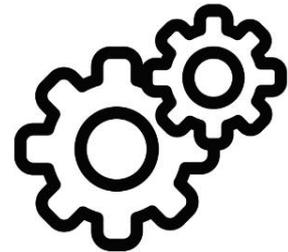

Close Settings

Choose you printer and ***Print***

Happy Printing!