 


# Printer Settings

## Magicard Enduro (half panel)

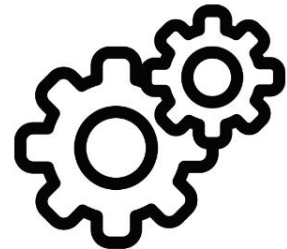

Close

 
 
 
***Smart Identity Pro***

and



***Adobe Reader***

before applying printer settings



# Open *Devices and Printers* or *Printer and Scanners* based on your Windows version

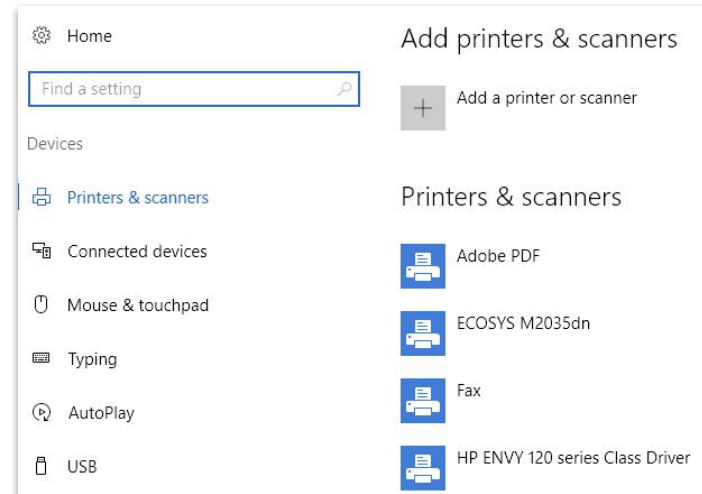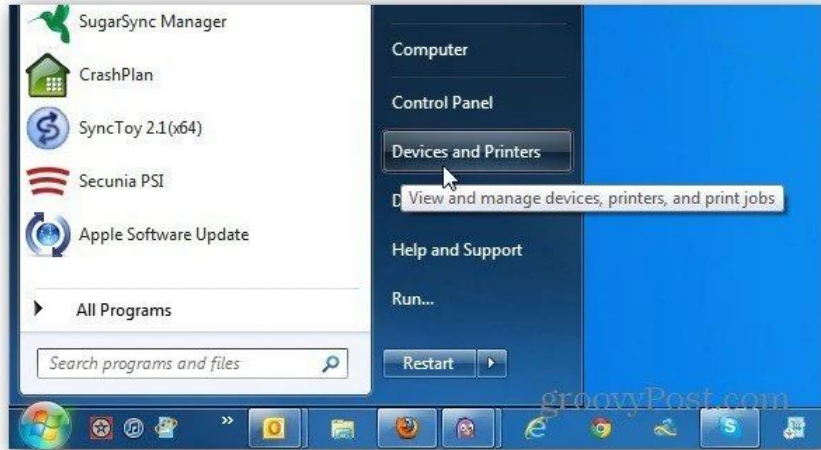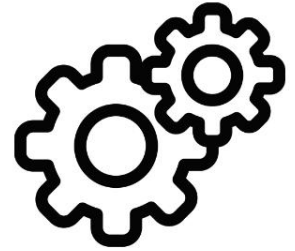

# Right click on printer icon to select *Printing Preferences*

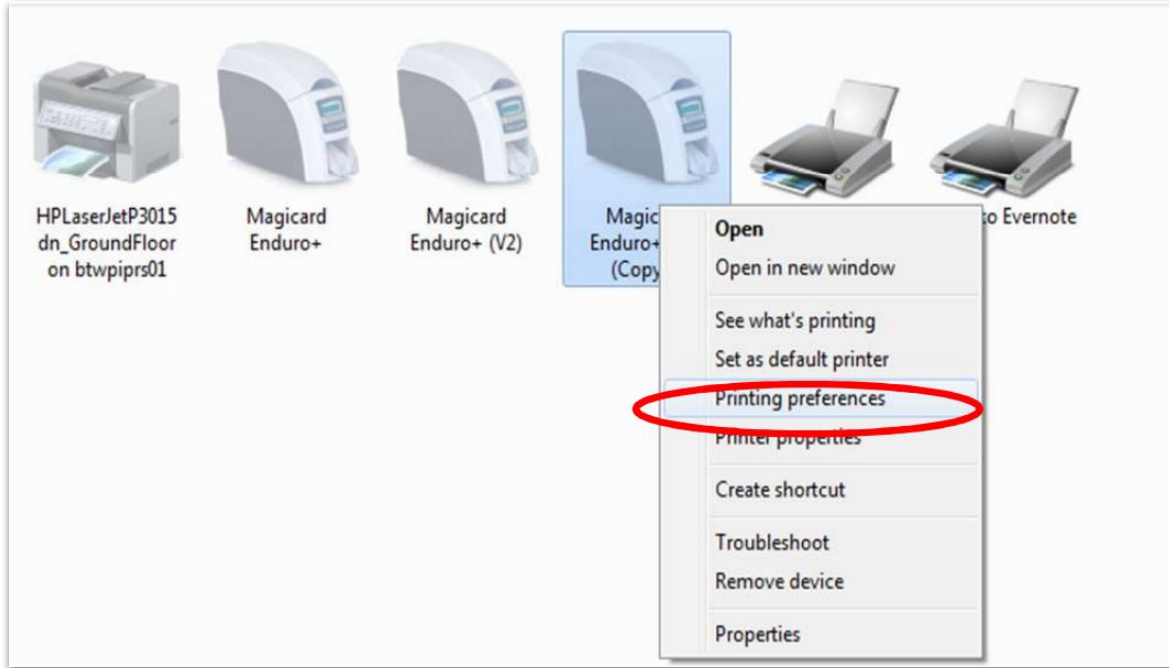 
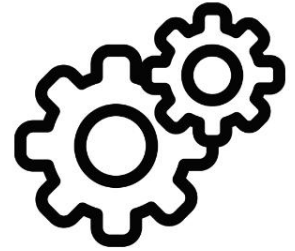 


# Printer Tab (*edit only if required*)

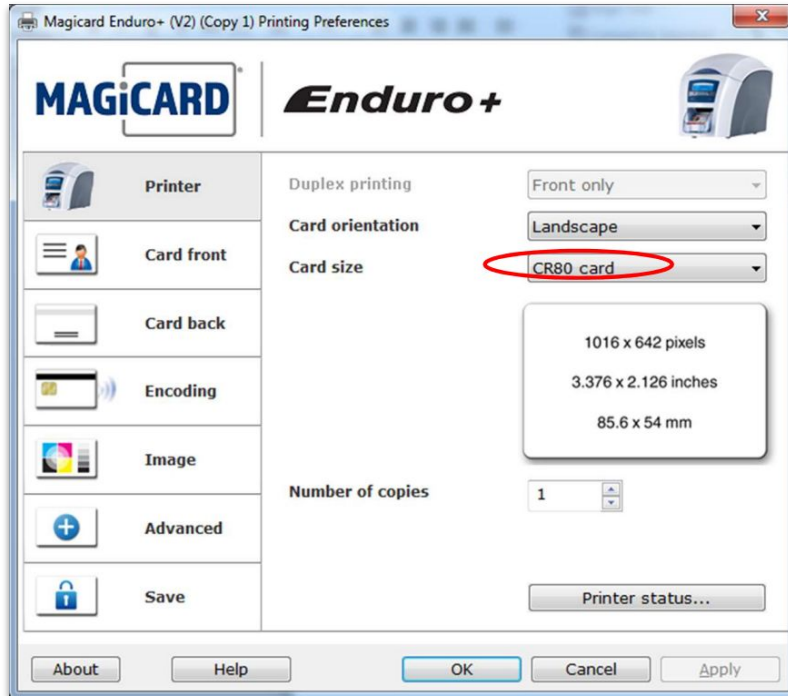 
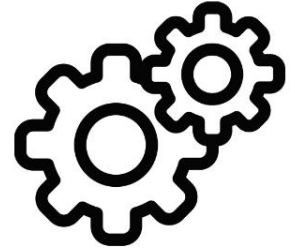 


# Card Front

  (match as shown)

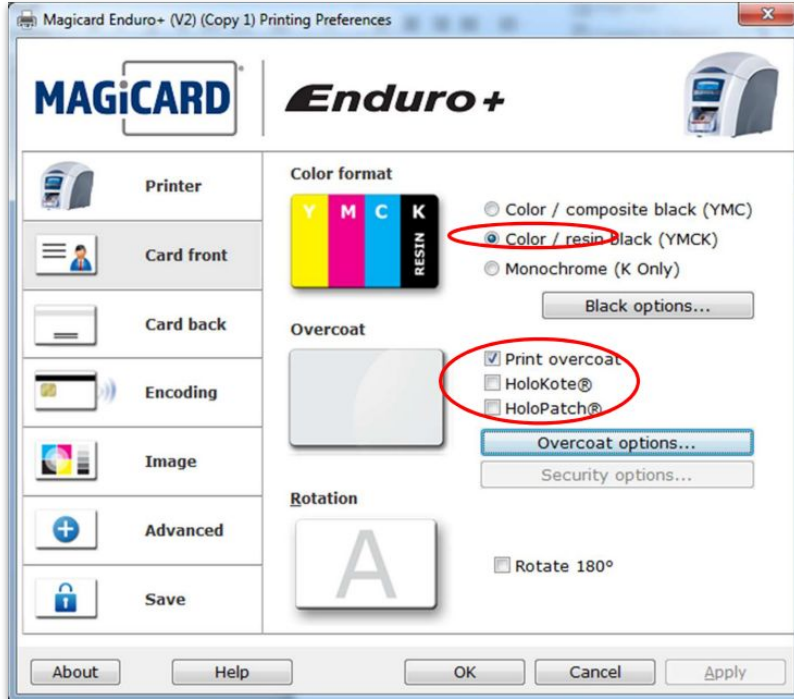
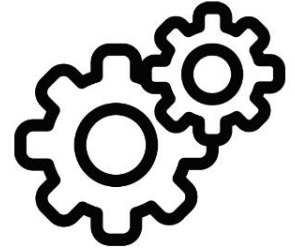


# Card Front -> Black Options (match as shown)

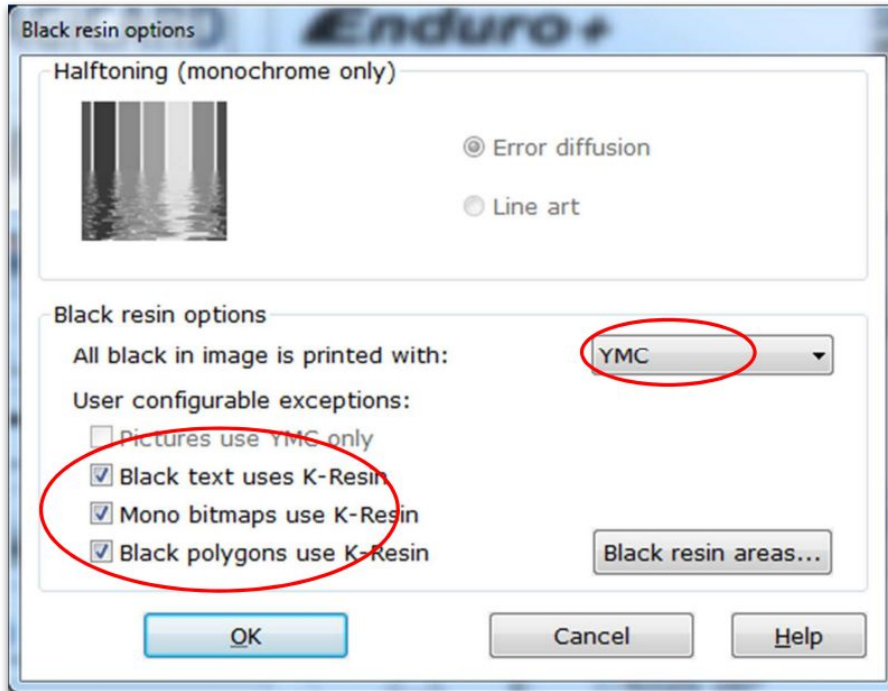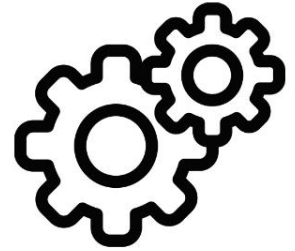  

# Card Back

 
 
(*match as shown*)

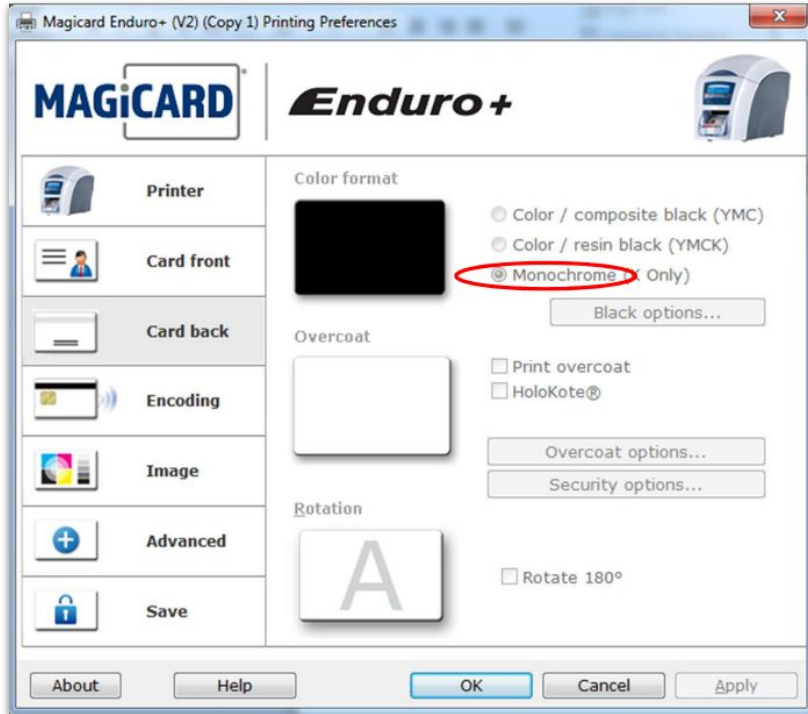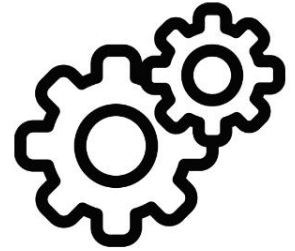





# Image Tab

 
 
(*match as shown*)

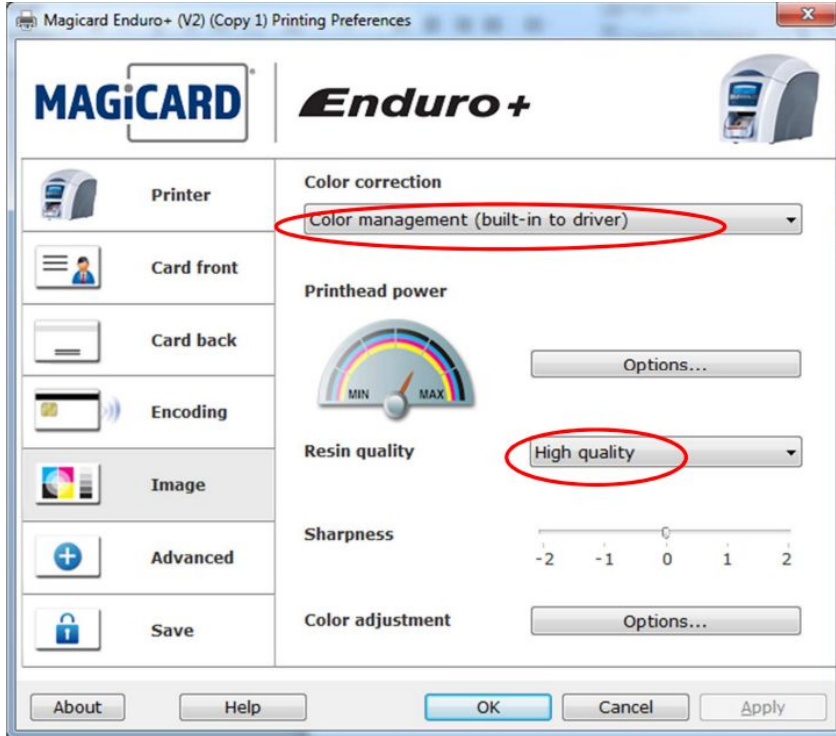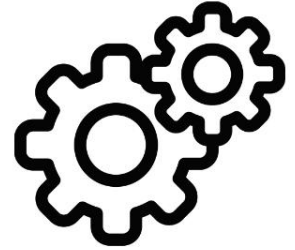



# Image Tab -> Printhead Power -> Options (match as shown)

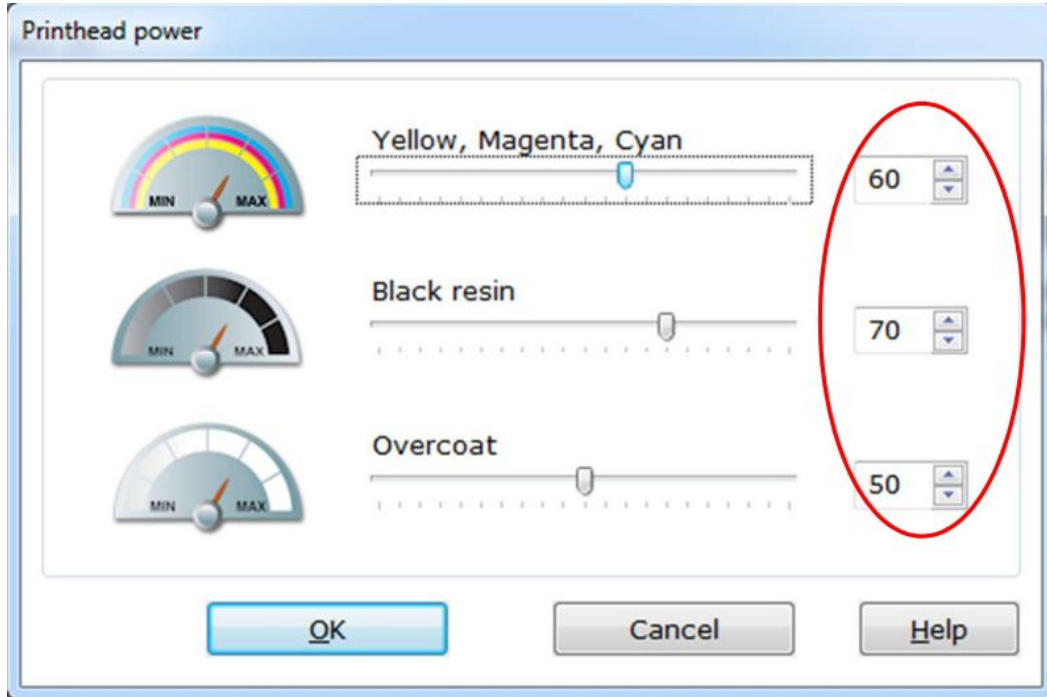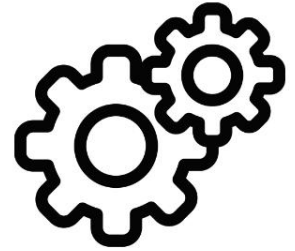  


# Image Tab -> Printhead Power -> Options (match as shown)

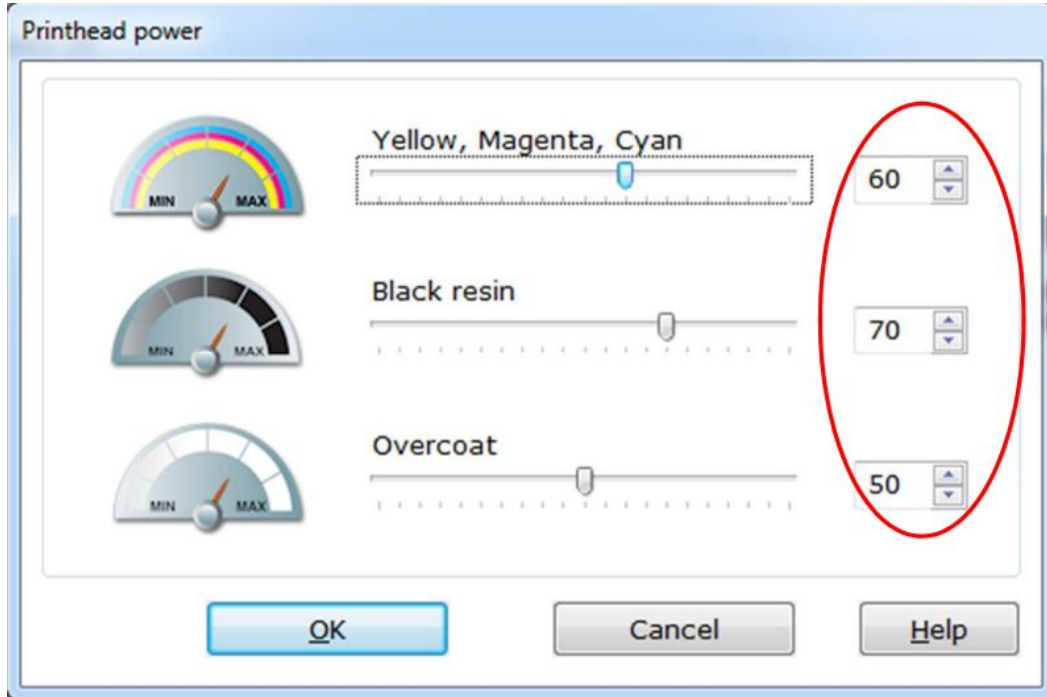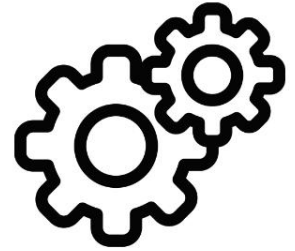  

# Apply Settings

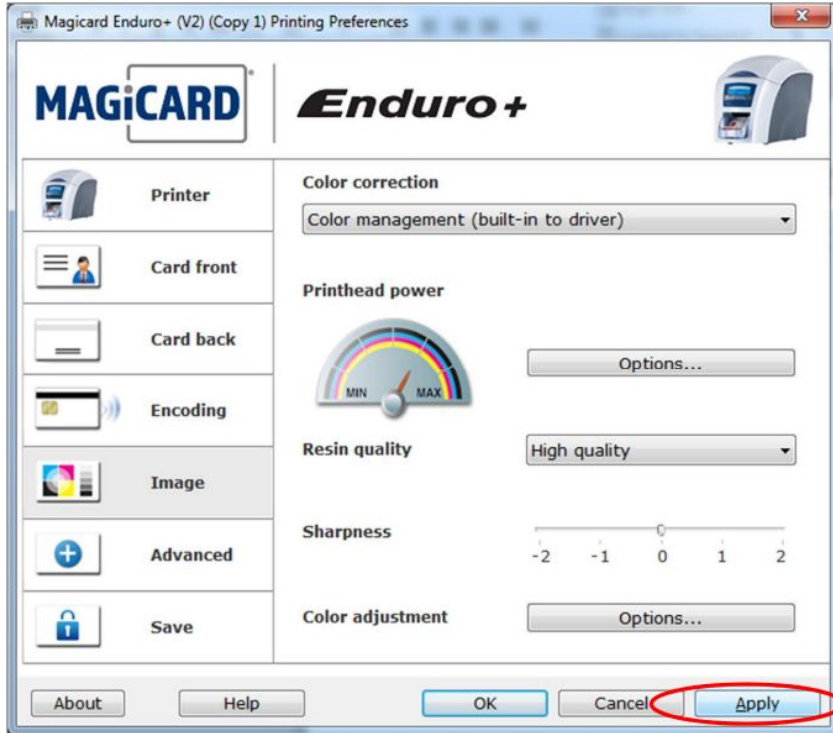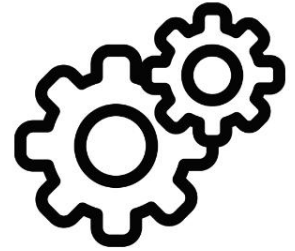  

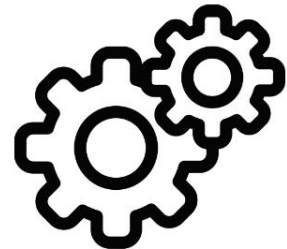 

Start ***Smart Identity Pro***  
Choose you printer and ***Print***

**Happy Printing!**